

WINvote Touch Screen Voting

★ Step One




Read the ballot title and instructions.
Touch the

Touch Here to Start

button on the screen when ready to begin voting.

★ Step Two

To make your selection, touch the name of the candidate. A red **X** will appear and the box will be highlighted in red.

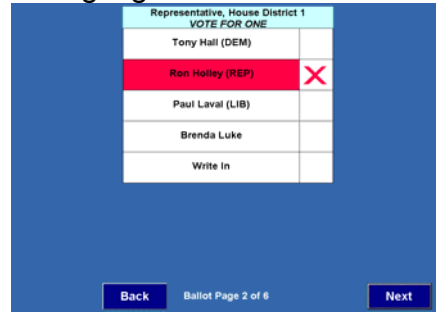

To change or cancel your selection, touch the box again.

Touch the **NEXT** button to advance to the page of the ballot or the **BACK** button to go back to the previous page.

★ Step Three

Review the summary page.


Review your choices and make changes if desired by touching the office title to return to it and make a change to your selection.



Touch **NEXT** if you are satisfied with your selections.

★ Step Four

Cast your vote by touching the **VOTE** button.

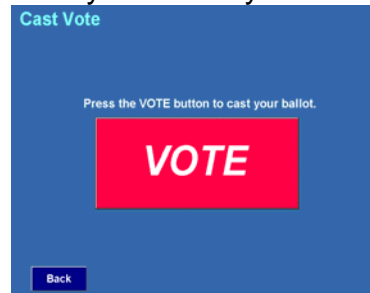

Wait to see the Thank you message:

